

QU4D Prop Guard Assembly


You will need to remove the 45mm bolts, remove the original spacer from the motor mount and replace it with the spacer provided with the prop guards. Please also note that the spacer provided is in the correct orientation.



Once you have replaced the spacer ensure that the motor is sufficiently tightened to the carbon fibre boom.

Use two of the 6mm M3 bolts to mount the two parts shown on the right.

Use two of the 6mm M3 bolts to mount the two parts shown on the right. Please make sure that all bolts are tight.

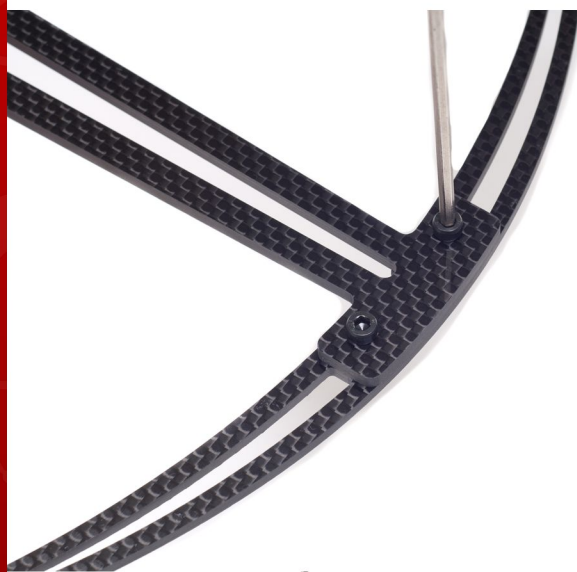

**STEADI
DRONE**
WWW.STEADIDRONE.COM